



Installation and technical manual
EasyControl / Eco-Interface



GB

EasyControl Eco-Interface

THESE INSTRUCTIONS SHOULD BE READ CAREFULLY AND RETAINED FOR FUTURE REFERENCE.

BE SURE TO OBSERVE ALL LABELS AND WARNINGS ON THE APPLIANCE.

Edition:09/15

Id_Nr.911 361 531

General


The connection quality of the product may be affected by different modifications of the IP architecture on which it operates. These modifications can be, but are not limited to, a change of hardware, a software update or configuration, work conducted on your operator's equipment or any other multimedia equipment such as tablets, smartphones, etc." Android™ and Google are registered trademarks of Google Inc. IOS™ is a registered trademark of Cisco Systems Inc. WiFi is a trademark by Wireless Ethernet Compatibility Alliance. Because of changes in standards and equipment, the characteristics given in the text and the illustrations in this document are not binding unless confirmed.

TECHNOTHERM hereby declares that the equipment complies with the essential requirements and other relevant provisions of R&TTE directive 1999/5/EC (wireless)



1. Content

- **A:** Eco-Interface
- **B:** Mains supply
- **C:** Ethernet cable
- **D:** Installation instruction / Important product information
- **E:** AC adapter

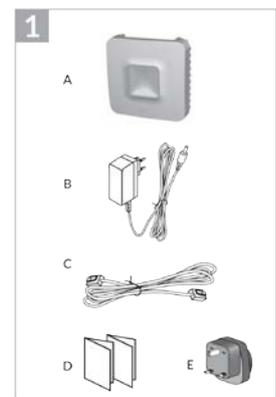


2. Description

- **F:** System status display LED
- **G:** Ethernet socket
- **H:** Not used
- **I:** Mains adaptor socket
- **J:** Configuration / Information button



3. Installation


- 3.1) Connect the Eco-Interface according to your installation

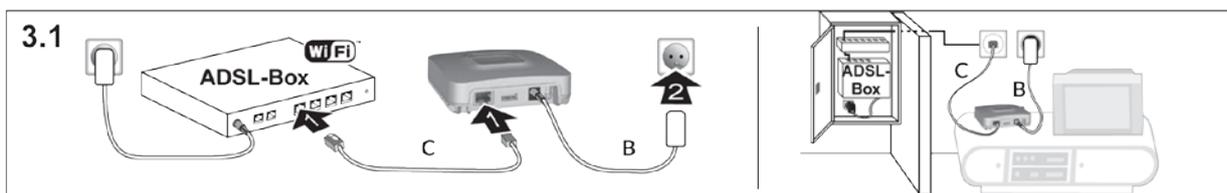


- 3.2) Download the TYDOM application
 - According to the unit: Log in to Google play or App Store
 - Search for and download the TYDOM application
 - Aktivate the WIFI connection of your smartphone or tablet



- 3.3) Configure the TYDOM-APP.
 - 3.3.1 Note down the last 6 characters of the MAC address of your TYDOM 1.0.
 - 3.3.2 Open the TYDOM application
 - 3.3.3 Enter the 6 characters (upper case letters) in the “identifier” field then enter your “password” (at least 8 alphanumeric characters).

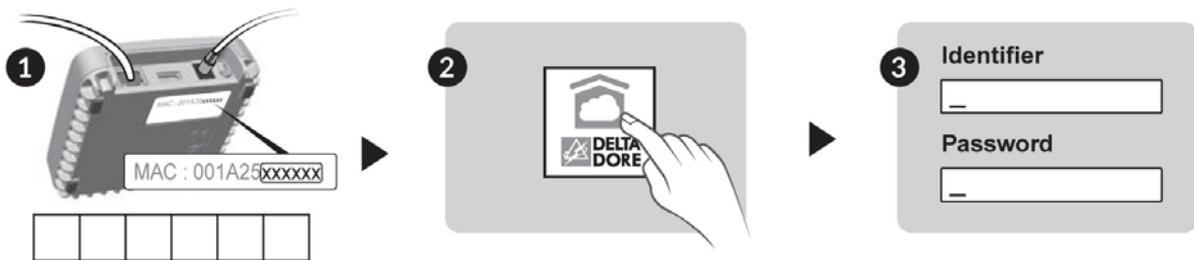

- 3.3.4 Press the „Login“ button.
- 3.3.5 The home screen is displayed. You are logged in.

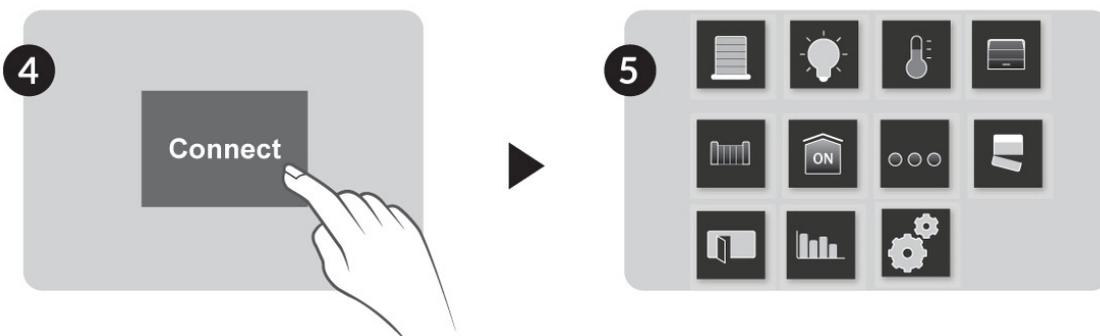

4. Information and support

LED	System status
Pulsing green	System accessible locally and remotely, user connected
Green on and steady	System accessible locally and remotely
Pulsing orange	System accessible locally, user connected
Orange on and steady	System accessible locally
Red on and steady	No IP address allocated

GB

Diagnostic function:

Briefly press the button (LED displays for 10 seconds)

LED	System status
Flashing yellow	Fixed IP OK
Flashing blue	DHCP OK / Upnp OK
Flashing blue (2x)	DHCP OK / Upnp Error Check the Upnp activation on the BOX
Flashing blue (3x)	DHCP in progress Check the DHCP activation on the BOX
Flashing red	No network connection Check the Ethernet link

Advanced functions

DHCP/Fixed IP Press the button for at least 3 seconds	
LED	Action
Flashing magenta (slowly)	Release the button (before 15 seconds)

Delete password Press the button for at least 15 seconds	
LED	Action
Flashing magenta (rapidly)	Release the button (before 30 seconds)

RESET	
Press the button for at least 30 seconds	
LED	Action
System status	Release the button Use of DHCP Password deletion Association removal

GB


5. Product association

First connect the thermostat TPF-Eco with the radio receiver TRF-Eco on your radiator according to the following scheme.

Then connect your Thermostat with the App



Set the product to association wait mode (refer to the user guide)

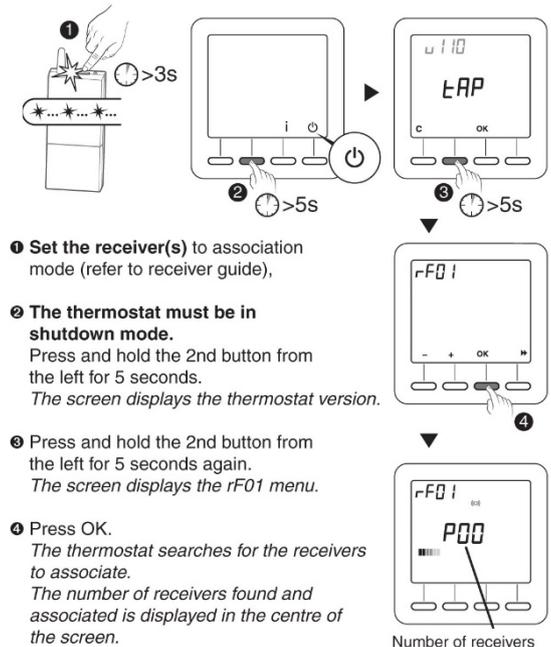

6. Service

Should you encounter a problem or raises questions about operation, please contact our customer service.

Lucht LHZ Elektroheizung GmbH & Co. KG
 Obere Hauptstr. 61
 09232 Hartmannsdorf
 Fon: 03722 63370
 Fax: 03722 633720
 E-mail: info@technotherm.de
 web: www.technotherm.de

TECHNOTHERM after sales service

Phone: +49 (0) 911 93 78 32 10